

UNITED STATES PATENT APPLICATION

FOR

**METHOD AND APPARATUS FACILITATING DIRECT ACCESS TO A
PARALLEL ATA DEVICE BY AN AUTONOMOUS SUBSYSTEM**

INVENTORS:

David S. Bormann
Chao-Hsin Chi
Frank P. Hart
Dong Tieu

Prepared by:

BLAKELY, SOKOLOFF, TAYLOR & ZAFMAN LLP
12400 WILSHIRE BOULEVARD
SEVENTH FLOOR
LOS ANGELES, CALIFORNIA 90025
(408) 720-8300

Attorney's Docket No. 42390.P9736

EXPRESS MAIL CERTIFICATE OF MAILING

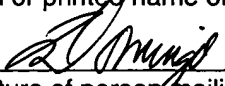
"Express Mail" mailing label number EL 617 210 203 US

Date of Deposit December 28, 2000

I hereby certify that I am causing this paper or fee to be deposited with the United States Postal Service "Express Mail Post Office to Addressee" service under 37 CFR 1.10 on the date indicated above and is addressed to the Commissioner of Patents and Trademarks, Washington, D.C. 20231

Tina Domingo

(Typed or printed name of person mailing paper or fee)

 12-28-2000

(Signature of person mailing paper or fee)

Date

006337-2003-150

METHOD AND APPARATUS FACILITATING DIRECT ACCESS TO A PARALLEL ATA DEVICE BY AN AUTONOMOUS SUBSYSTEM

FIELD OF THE INVENTION

5 The present invention pertains to the field of computers. More particularly, the present invention relates to a method and apparatus facilitating direct access to a parallel Advanced Technology Attachment (ATA) device by an autonomous subsystem in the absence of the main operating system (OS).

10 BACKGROUND OF THE INVENTION

Computer based systems are becoming more mobile. This mobility often places an emphasis on usability. Usability is often extended by the ability to operate the equipment for longer periods of time. This time period is often related to the power consumption of the equipment, particularly in battery operated equipment. Thus, high
15 power consumption may pose problems.

Numerous approaches to reducing power consumption have been tried. Powering off equipment when not in active use is one approach. Other approaches involve putting equipment in various lower power states, such as, idle mode, sleep mode, hibernation mode, etc. Such approaches may involve turning off portions of
20 circuits or components, powering down subsystems and/or the main system, lowering supply voltages, altering clocking mechanisms, transferring data from, for example, random access memory (RAM) to disk storage, etc.

One such approach to conserve power consumption is to have the host or central

BRIEF DESCRIPTION OF THE DRAWINGS

The present invention is illustrated by way of example and not limitation in the figures of the accompanying drawings, in which like references indicate similar elements and in which:

- 5 **Figure 1** illustrates a networked computer environment;
- Figure 2** is a block diagram of a computer system;
- Figure 3** illustrates a system architecture according to one embodiment;
- Figure 4** illustrates in block diagram of switching access according to one embodiment;
- 10 **Figure 5** illustrates an ACPI state table;
- Figure 6** illustrates a flow chart describing the steps in according to one embodiment; and
- Figure 7** illustrates a block diagram according to one embodiment.

DETAILED DESCRIPTION

A method and apparatus for an autonomous subsystem accessing a parallel ATA device in the absence of the main OS is described.

For purposes of discussing the invention, it is to be understood that various
5 terms are used by those knowledgeable in the art to describe techniques and standards. The power or energy consuming state of a device, such as a microprocessor, central processing unit (CPU), or even a system is to be understood as having a continuum of power ranges for operation, such as, fully awake, idle mode, sleep mode, hibernation mode, fully off, etc. These different power states may be invoked and/or maintained by
10 mechanisms such as control lines, commands, frequency control, voltage control, current control, etc.

For example, one industry specification is the Advanced Configuration and Power Interface Specification (ACPI, Revision 2.0, published July 27, 2000), describes a variety of states and configurations in which a device, such as a CPU and/or system
15 may operate. For convenience in the discussion, reference will be made to several ACPI defined S states. These ACPI S states are S0, S1, S2, S3, S4, and S5. In one embodiment, S0 is considered the normal on or operating state in which a system is fully on and executing a main operating system. States S1, S2, S3, and S4 are considered as various lower power states. For example, in S1 the main system is on,
20 however it is idling. S2 is a lower power state where the CPU may be off and memory is being refreshed. S3 is similar to S2 except peripheral devices can be powered down. S4 is lower power still with memory contents stored in a non-volatile device (such as a hard disk) and power to memory is turned off. Finally, state S5 is fully off, except for

perhaps a real time clock (RTC).

Regardless of the standard used to describe the state of a system, there are resources connected to a system that may only be accessible to that system when the system is in certain states. While the system is in those states when the resources are not accessible by the system, it may be possible to connect those resources to other systems and/or subsystems that may be able to utilize them. Additionally, it is to be appreciated that in some of these states the main system operating system (OS) may not be executing, and yet the resources may be shared. That is, in certain states there may be no need for the OS. For example, the "main" system is not materially affected by the "subsystem" use and therefore suffer little to no performance degradation. Such a subsystem that may be able to make effective use of the resources is referred to herein as an autonomous subsystem.

A computer-based system may be composed of many components, which are described herein as a main system and possibly multiple subsystems. For example, in a personal computer there is a main processor which executes most of the applications and often to run or execute the applications runs a main operating system such as the Windows® operating system or the Linux® operating system. Subsystems in a personal computer, for example, may include, but are not limited to, the keyboard, the sound system, the graphics, etc.

An example of an autonomous subsystem may be a radio frequency (RF) communications link that remains active for receiving communications and when necessary connecting to a main system resource, such as a hard disk to store messages.

Communications between a main system and its resources and a subsystem and

its resources may be effected by, for example, but is not limited to, a wired bus, wireless techniques (such as optical, RF, etc.), etc. The communication contents may include, but is not limited to, commands, data, software code, signals, messages, information, interrupts, etc.

5 A machine-readable medium is understood to include mechanisms for storing or transmitting information in a form readable by a machine (e.g., a computer). For example, a machine-readable medium includes read only memory (ROM); random access memory (RAM); magnetic disk storage media; optical storage media; flash memory devices; electrical, optical, acoustical or other form of propagated signals (e.g., carrier waves, infrared signals, digital signals, etc.); etc.

10 **Figure 1** illustrates a network environment in which the techniques described may be applied. As shown, several computer systems in the form of servers 104-1 through 104-M and clients 108-1 through 108-N are connected to each other via a network, which may be, for example, the Internet. Note that alternatively the network 102 might be or include one or
15 more of: a Local Area Network (LAN), Wide Area Network (WAN), satellite link, fiber network, cable network, or a combination of these and/or others. The method and apparatus described herein may be applied to essentially any type of communicating technique or device whether local or remote, such as a LAN, a WAN, a system bus, a disk drive, storage, etc.

20 **Figure 2** illustrates a conventional personal computer in block diagram form, which may be representative of any of the clients and servers shown in **Figure 1**. The block diagram is a high level conceptual representation and may be implemented in a variety of ways and by various architectures. Bus system 202 interconnects a Central Processing Unit (CPU) 204, Read Only Memory (ROM) 206, Random Access Memory (RAM) 208, storage 210, display

220, audio, 222, keyboard 224, pointer 226, miscellaneous input/output (I/O) devices 228, and communications 230. The bus system 202 may be for example, one or more of such buses as a system bus, Peripheral Component Interconnect (PCI), Advanced Graphics Port (AGP), Small Computer System Interface (SCSI), Institute of Electrical and Electronics Engineers (IEEE) standard number 1394 (FireWire), etc. The CPU 204 may be a single, multiple, or even a distributed computing resource. The ROM 206 may be any type of non-volatile memory, which may be programmable such as, mask programmable, flash, etc. RAM 208 may be, for example, static, dynamic, synchronous, asynchronous, or any combination. Storage 210, may be Compact Disc (CD), Digital Versatile Disk (DVD), hard disks (HDD), optical disks, tape, flash, memory sticks, video recorders, etc. Display 220 might be, for example, a Cathode Ray Tube (CRT), Liquid Crystal Display (LCD), a projection system, Television (TV), etc. Audio 222 may be a monophonic, stereo, three dimensional sound card, etc. The keyboard 224 may be a keyboard, a musical keyboard, a keypad, a series of switches, etc. The pointer 226, may be, for example, a mouse, a touchpad, a trackball, joystick, etc. I/O devices 228, might be a voice command input device, a thumbprint input device, a smart card slot, a Personal Computer Card (PC Card) interface, virtual reality accessories, etc., which may optionally connect via an input/output port 229 to other devices or systems.

An example of a miscellaneous I/O device 228 would be a Musical Instrument Digital Interface (MIDI) card with the I/O port 229 connecting to the musical instrument(s).

Communications device 230 might be, for example, an Ethernet adapter for local area network (LAN) connections, a satellite connection, a settop box adapter, a Digital Subscriber Line (xDSL) adapter, a wireless modem, a conventional telephone modem, a direct telephone connection, a Hybrid-Fiber Coax (HFC) connection, cable modem, etc.

090331 2303260

The external connection port 232 may provide for any interconnection, as needed, between a remote device and the bus system 202 through the communications device 230. For example, the communications device 230 might be an Ethernet adapter, which is connected via the connection port 232 to, for example, an external DSL modem. Note that depending upon the actual implementation of a computer system, the computer system may include some, all, more, or a rearrangement of components in the block diagram. For example, a thin client might consist of a wireless hand held device that lacks, for example, a traditional keyboard. Thus, many variations on the system of **Figure 2** are possible.

Referring back to **Figure 1**, clients 108-1 through 108-N are effectively connected to web sites, application service providers, search engines, and/or database resources represented by servers, such as servers 104-1 through 104-M, via the network 102. The web browser and/or other applications are generally running on the clients 108-1 through 108-N, while information generally resides on the servers 104-1 through 104-M. For ease of explanation, a single client 108-1 will be considered to illustrate one embodiment of the present techniques. It will be readily apparent that such techniques can be easily applied to multiple clients.

A subsystem may be, but is not limited to, one or more of the elements of **Figure 2**. For example, Storage 210 may have a subsystem that handles how data is to be stored and retrieved. Audio 222 may have a subsystem that handles when to, for example, power down speakers. Communications device 230 may, for example, have a subsystem that needs to transfer information to the Storage 210 without using the main operating system upon receiving a message.

Figure 3 illustrates one possible system architecture for one embodiment. A

host central processing unit (CPU) 302 is coupled via link 303 to a memory controller hub (MCH) 304. The MCH 304 is coupled via link 305 to an input/output controller hub (ICH) 306, and via link 329 to a main memory 330. The ICH 306 is coupled to a hard disk drive (HDD) 310 via a parallel ATA (PATA) link 309. The ICH 306 is also
5 coupled to the subsystem 314 via a parallel ATA (PATA) link 313. Additionally the ICH 306 is coupled via a low pin count (LPC) 311 link to a firmware hub (FWH) 312, and the subsystem 314. The subsystem 314 is coupled to subsystem memory 324 via link 323. The subsystem 314 is coupled to a flash electrically programmable read only memory (FEPR0M) 316 via link 315.

10 **Figure 4** illustrates in block diagram form the ICH 406 switch in a access to the HDD 410 PATA link 409 between the main system 401 and the subsystem 420. When the main system is in ACPI state, in this example, S0 or S1 then the switch is in the M position (as shown), and the main system 401 has access to the HDD 410 via PATA link 409. When the main system is in ACPI state S2, S3, S4, or S5 then the switch is in
15 the S position, and the subsystem 420 has access to the HDD 410 via PATA link 409 through the PATA 413 link to the subsystem 420. An alternative embodiment may have switch position M corresponding to main system ACPI states S0, S1, and S2, in which case switch position S would be activated only for main system ACPI states S3, S4, or S5.

20 **Figure 5** illustrates in a table form the ACPI states and the respective parallel ATA (PATA) accessibility by either the main system or the subsystem in one embodiment. In this embodiment, ACPI states S0, S1, and S2 allow accessibility of the PATA by the main system, and ACPI states S3, S4, and S5 allow accessibility of the

PATA by the subsystem.

Figure 6 illustrates in flow chart form one embodiment. At 602 a check is made of the main system ACPI state. If the main system ACPI state is S0, S1, or S2, then a connection of the PATA to the main system is made 604. If the main system ACPI state is not S0, S1, or S2, then a connection of the PATA to the subsystem is made 606. After the connection is made to either (604 or 606) then the main system ACPI state is again checked (at 602). In this manner, the connection of the PATA is kept current and may respond to any changes in the main system ACPI state. In this way, the main system is controlling the PATA connection and will have access when needed, thus little or no degradation in the PATA performance when the main operating environment is active will be suffered.

Figure 7 illustrates one embodiment in partial block and schematic form. System Number (No.) 1, 701 provides to the PATA Switch Block 720, two signals S0 and S1 indicating the ACPI S state of system no. 1 701. In one embodiment, the S0 and S1 signals are routed to an OR gate 721. Additionally, in this example embodiment, PATA lines are illustrated connecting system no. 1 701 with the PATA switch block 720, where they connect to a transmission gate (TG) type device 723. The actual number of signal lines in a particular PATA implementation may depend upon the specification being implemented. For illustrative purposes the letter N denotes the number of signal lines. N PATA lines are illustrated connecting system no. 2 702 with the PATA switch block 720, where they connect to a transmission gate (TG) type device 724. N PATA lines are illustrated connecting PATA device 710 with the PATA switch block 720, where they connect to both TG 723 and 724 type devices. The output of OR

gate 721 connects to the control for TG type device 723 and inverter 722. The output of inverter 722 connects to the control for TG type device 724.

In operation, because of the inverter 722 between the TG control of 723 and 724, logically when TG 723 is on, TG 724 will be off, and vice versa. Thus, when either S0 or S1 is active logical high, the output of OR gate 721 will be active high which will turn on TG 723 and through inverter 722 will turn off TG 724. In this case then, the N PATA lines from system no. 1 will be electrically connected to the corresponding N PATA lines from the PATA device 710. At the same time, because TG 724 is off, system no. 2's 702 N PATA lines will be electrically disconnected from the N PATA lines of PATA device 710. Thus system no. 1 701 will be able to access the PATA device 710.

When neither signal S0 or S1 is logically high, then the reverse will occur and system no. 2 702 will be connected to, and be able to, access PATA device 710, and system no. 1 701 will be disconnected from PATA device 710.

The embodiment as illustrated in **Figure 7** is to show the switching mechanism involved. It is to be understood that the actual IDE controller(s) that may communicate with the PATA device 710 may be embedded, for example, in system no. 1 701, and/or system no. 2 702.

The illustrated embodiments of the present invention are to be understood as applicable to a plurality of system and/or subsystems within a single and/or distributed system or systems. For example, in a single system, there may be a main system with a main CPU and standard operating system and a subsystem handling, for example, RF communications. Likewise, the implementation of the present invention is to be

